




## **INSTALLATION GUIDE**

**CTS Turbo 1.8T/2.0T MQB GEN3 HIGH-FLOW TURBO INLET PIPE  
CTS-IT-285**

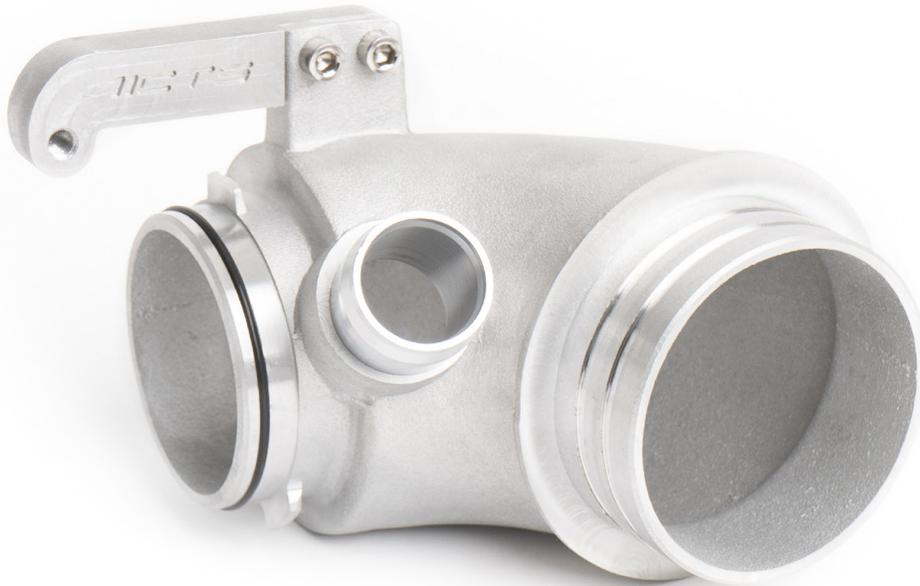

**20630 Mufford Crescent, Unit #309  
Langley, British Columbia V2Y 2V9**

**[www.CTSTURBO.com](http://www.CTSTURBO.com)**

**WHAT IS INCLUDED**

1. CTS turbo inlet pipe
2. O-ring

**NOTES**

Vehicle used in this guide is a 2016 Golf R. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

**STEP 1**


Remove the intake

Depending on your intake removal may vary.

**STEP 2**

Remove the PCV hose

Use a small pick or screwdriver to aid removal

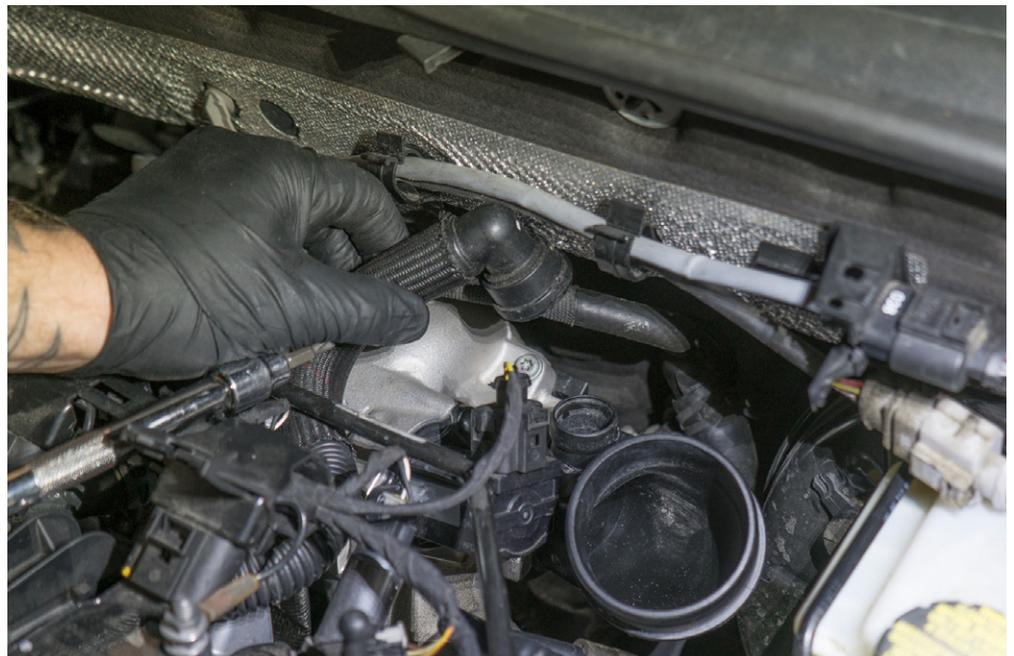

**STEP 3**

Remove the T30 torx bolt holding the factory inlet pipe to the turbo

**STEP 4**

Rotate the factory inlet pipe clockwise and remove



**STEP 5**

Loosen the two 4mm allen bolts by half a turn on the CTS inlet to allow for some movement

**STEP 6**

Install the CTS turbo inlet pipe and rotate counter-clockwise.

Reinstall the T30 torx bolt. Be careful to not force the bolt or you will cross-thread the mounting hole.



**STEP 7**

You may now tighten the 4mm allen bolts.

**STEP 8**

Re-install the PCV hose, it will click when installed properly.

Re-install the intake and you are done!

