

## Plasma Direct Installation Instructions for Audi RS3(DAZ), RSQ3(DNW)

Thank you for your purchase. Please read this instruction carefully for a proper and safe installation.


### Safety Instructions



1. Installation should be made only on designated vehicles and models.
2. Never modify or dismantle this product.
3. The vehicle should be on a flat surface, with tires blocked to prevent the vehicle from rolling.
4. The engine should be off and completely cooled. Be sure the ignition key is not inserted.
5. The negative terminal from the battery should be disconnected. Note that this may cause the security alarm to activate. Consult the vehicle owner's manual to prevent this from occurring.
6. The engine should be in good operating condition. Any sign of defects should be corrected before installation.
7. Make sure you have adequate ventilation before running the engine.
8. Installation should be performed by a professional mechanic.
9. If the engine performance was previously boosted through modification of the ignition timing or air/fuel ratio, it may require readjustment following installation of the product.
10. If any defects are found in the product, discontinue using it immediately and contact the dealer where you purchased the product or us.

### Parts Included

Plasma Direct coil x 5P

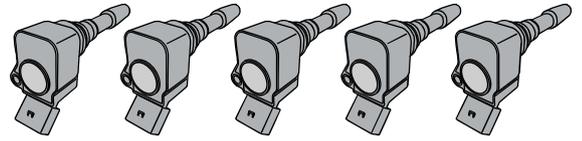


Zip tie x 1P


### Installation Procedure

- 1 Remove the engine cover so that you can start the installation of the Plasma Direct coils.


- 2 Unfix the blowby hose from the intake pipe and hose clip.

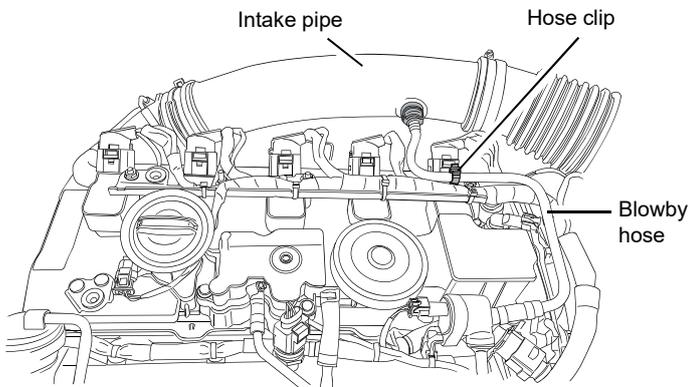


- 3 Remove the fixing nuts, and unfix the wiring stay.

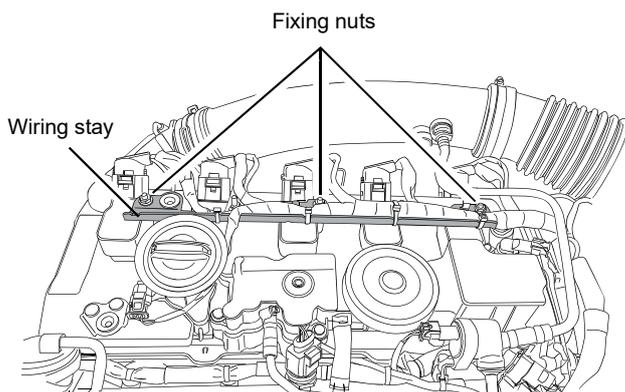


- 4 Remove the hose clip from the wiring stay. (The hose clip will not be used. Keep it at hand.)

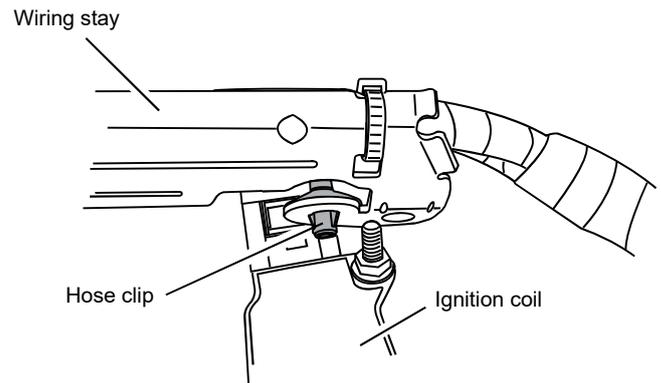

- 5 Remove the coil fixing nuts, and disconnect the coil connectors. Then, remove the ignition coils from the engine.

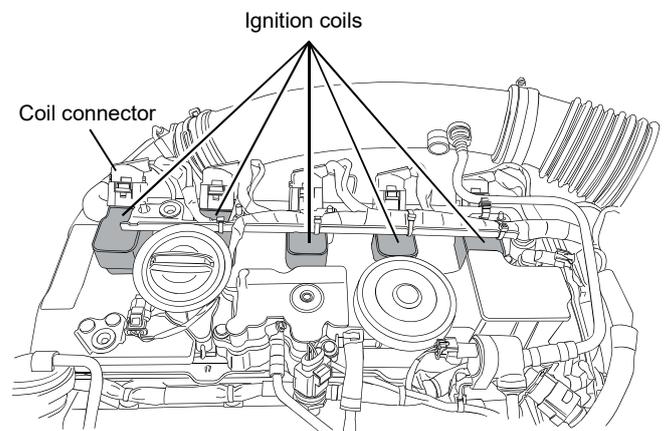


- 6 Install the Plasma Directs to the engine, and connect the coil connectors. Then, tighten the fixing nuts.

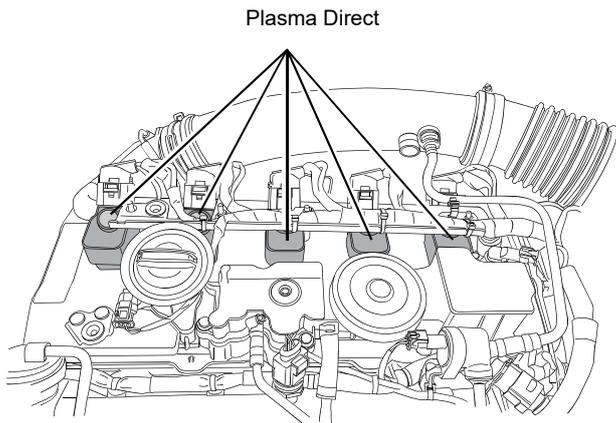

- 7 Fix the wiring stay with the removed nuts in the third step.

- 8 Attach the blowby hose back to the intake pipe.

- 9 Bundle up the blowby hose and wire harness together using the zip tie at where they contact.

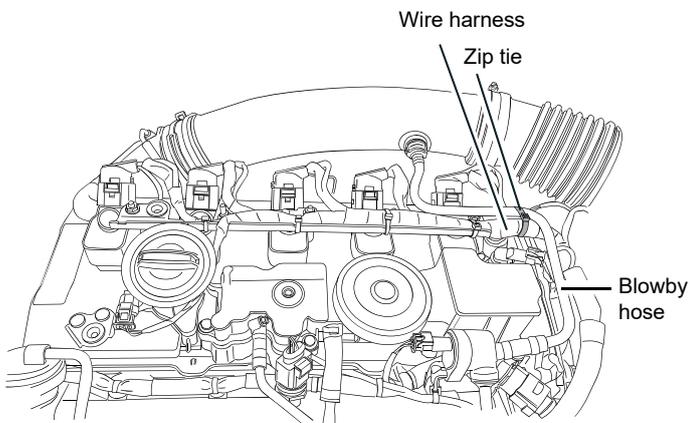

- 10 Place the engine cover back onto the engine.